



Just want to have fun

If you have any product quality issues,
please contact our customer service team via email first.
We will do our best to help you resolve the problem.

Email : service@blissmakersnovelties.com

 
BOX CONTENT

1 - The Masturbator Device

2 - Textured Inner Sleeve

3 - Power Cable

4 - Phone Holder

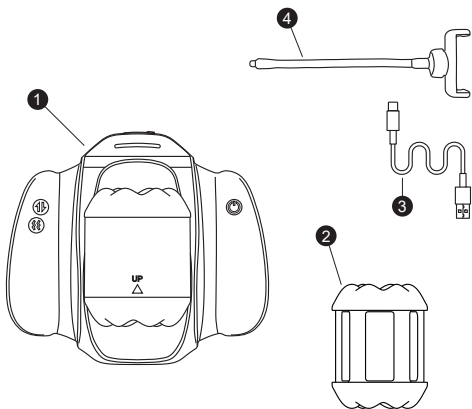

PRODUCT PARAMETER

Name: Handy Stroker

Material: ABS/Silicone/TPE

Max noise: ≤55 Decibel

Size: 153.6mm * 173.2mm * 86.6mm

Weight: 2.25lbs

Charging time: 120 mins

Working time: 45 mins

Charging method: USB-C charging

Batteryspecifications: Lithiumbattery, 1200mA

adapter Output: 3.7V, 1100mA

 
Function: 9 vibration mode, 3 Thrusting mode



APP QR Code
(Android/iOS system)
scan the QR code with your
phone to download




Product QR Code
Use APP to scan the QR code
to bind the device.
or enter the number: 764305

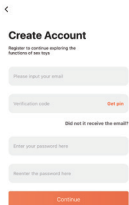


User Registration

 First time login please register first

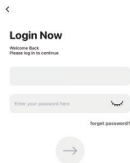

User Login

 Use your cell phone number or email address to complete registration and enter your account password to log in

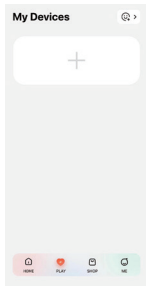


Add Device

First time login requires device binding




Scan the QR code

 Add by scanning the product QR code or entering the product number: 764305.

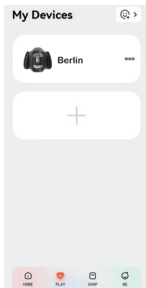

Operation Guide

 Click on my to view the operating instructions

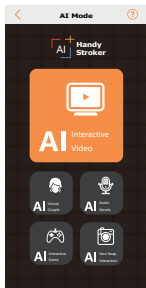

Getting Started

Use it with AI Mode

BUTTONS

Using the buttons



Power button/Pause:

Long press for 2 seconds to turn on the machine, the product is in standby mode. After powering on, press the power button to pause and press it again to resume.



 
Vibration Mode:

In Vibration mode, Press the button to switch 9 Vibration mode.



Thrusting mode:

In Thrusting mode, Press the button to switch 3 Thrusting mode.

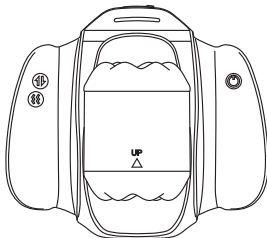

WARRANTY

The warranty for this erotic product is 1 year from the date of purchase. Any quality problems caused by defects in the manufacture or materials of the product are covered by the warranty. If you have any such quality problems within the warranty period, please notify us and we will replace the product for free. The warranty covers the quality of parts affecting the function of the product but does not cover cosmetic wear and tear caused by prolonged use or wear or damage caused by misuse, negligence, or accident. Any damage caused by attempting to open or disassemble the product (or accessory) is also not covered by the warranty.

If you have any questions, please feel free to contact our after-sales customer service

service@blissmakersnovelties.com

Warning!

Keep your Stroker away from water!

Use a damp cloth on Handy's exterior surface to keep it clean.



JUST WANT TO HAVE FUN

If you have any product quality issues, please contact our customer service team via email first. We will do our best to help you resolve the problem.

E-mail: service@blissmakersnovelties.com

